



INSTALLATION & WIRING INSTRUCTIONS



Please Read

**STREAMLINE
PEDESTAL STYLE**

- 1) No solenoid Required. Unit has a built-in relay.
- 2) Do not dismantle siren or remove rear cover.
- 3) Do not use a momentary dash switch.
- 4) Do not power foot switches. (Do Not Use Momentary Foot Switch)

Note: When dash switch is on, it arms foot switches and releases brake.

When dash switch is off the brake is on and the floor switches are dead.

- 5) Connect (red) 8 AWG wire (at B) to battery positive or cranking motor battery positive.
- 6) Connect (black) 8 AWG wire to clean ground or cranking motor battery negative.
- 7) Connect control wires, orange (at A), brown (at C) as per wiring diagram.

CAUTION:

Failure to properly follow the installation and wiring instructions may void warranty.

TIMBERWOLF SIREN TECHNOLOGY

3755 EL CAMINO DRIVE
SAN BERNARDINO, CA 92404
(909) 881-5241
FAX (909) 881-2988



INSTALLATION & WIRING INSTRUCTIONS



Please Read

VINYL BOOT REMOTE RELAY

- 1) Solenoid furnished separately with cover wire and terminals in parts bag.
- 2) Do not dismantle siren or remove vinyl cover.
- 3) Do not use a momentary dash switch.
- 4) Do not power foot switches. (Do Not Use Momentary Foot Switch)

Note: When dash switch is on, it arms foot switches and releases brake.

When dash switch is off the brake is on and the floor switches are dead.

- 5) Connect (red) 8 AWG wire (at B) to battery positive or cranking motor battery positive.
- 6) Connect (black) 8 AWG wire to clean ground or cranking motor battery negative.
- 7) Connect control wires, orange (at A), brown (at C) as per wiring diagram.

CAUTION:


Failure to properly follow the installation and wiring instructions may void warranty.

TIMBERWOLF SIREN TECHNOLOGY

3755 EL CAMINO DRIVE
SAN BERNARDINO, CA 92404
(909) 881-5241
FAX (909) 881-2988



PEDESTAL MOUNTING TEMPLATE

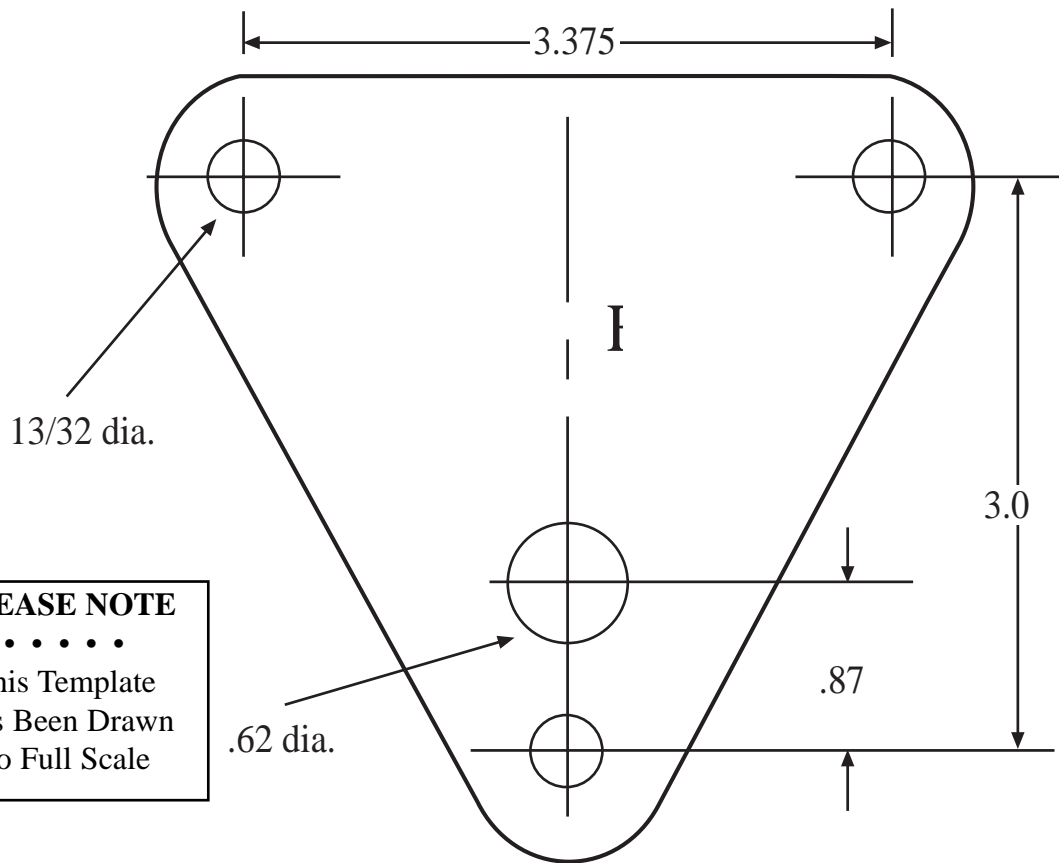


PLEASE NOTE
•••••
This Template
Has Been Drawn
To Full Scale

TIMBERWOLF SIREN TECHNOLOGY

3755 EL CAMINO DRIVE
SAN BERNARDINO, CA 92404
(909) 881-5241
FAX (909) 881-2988



FLANGE MOUNTING TEMPLATE

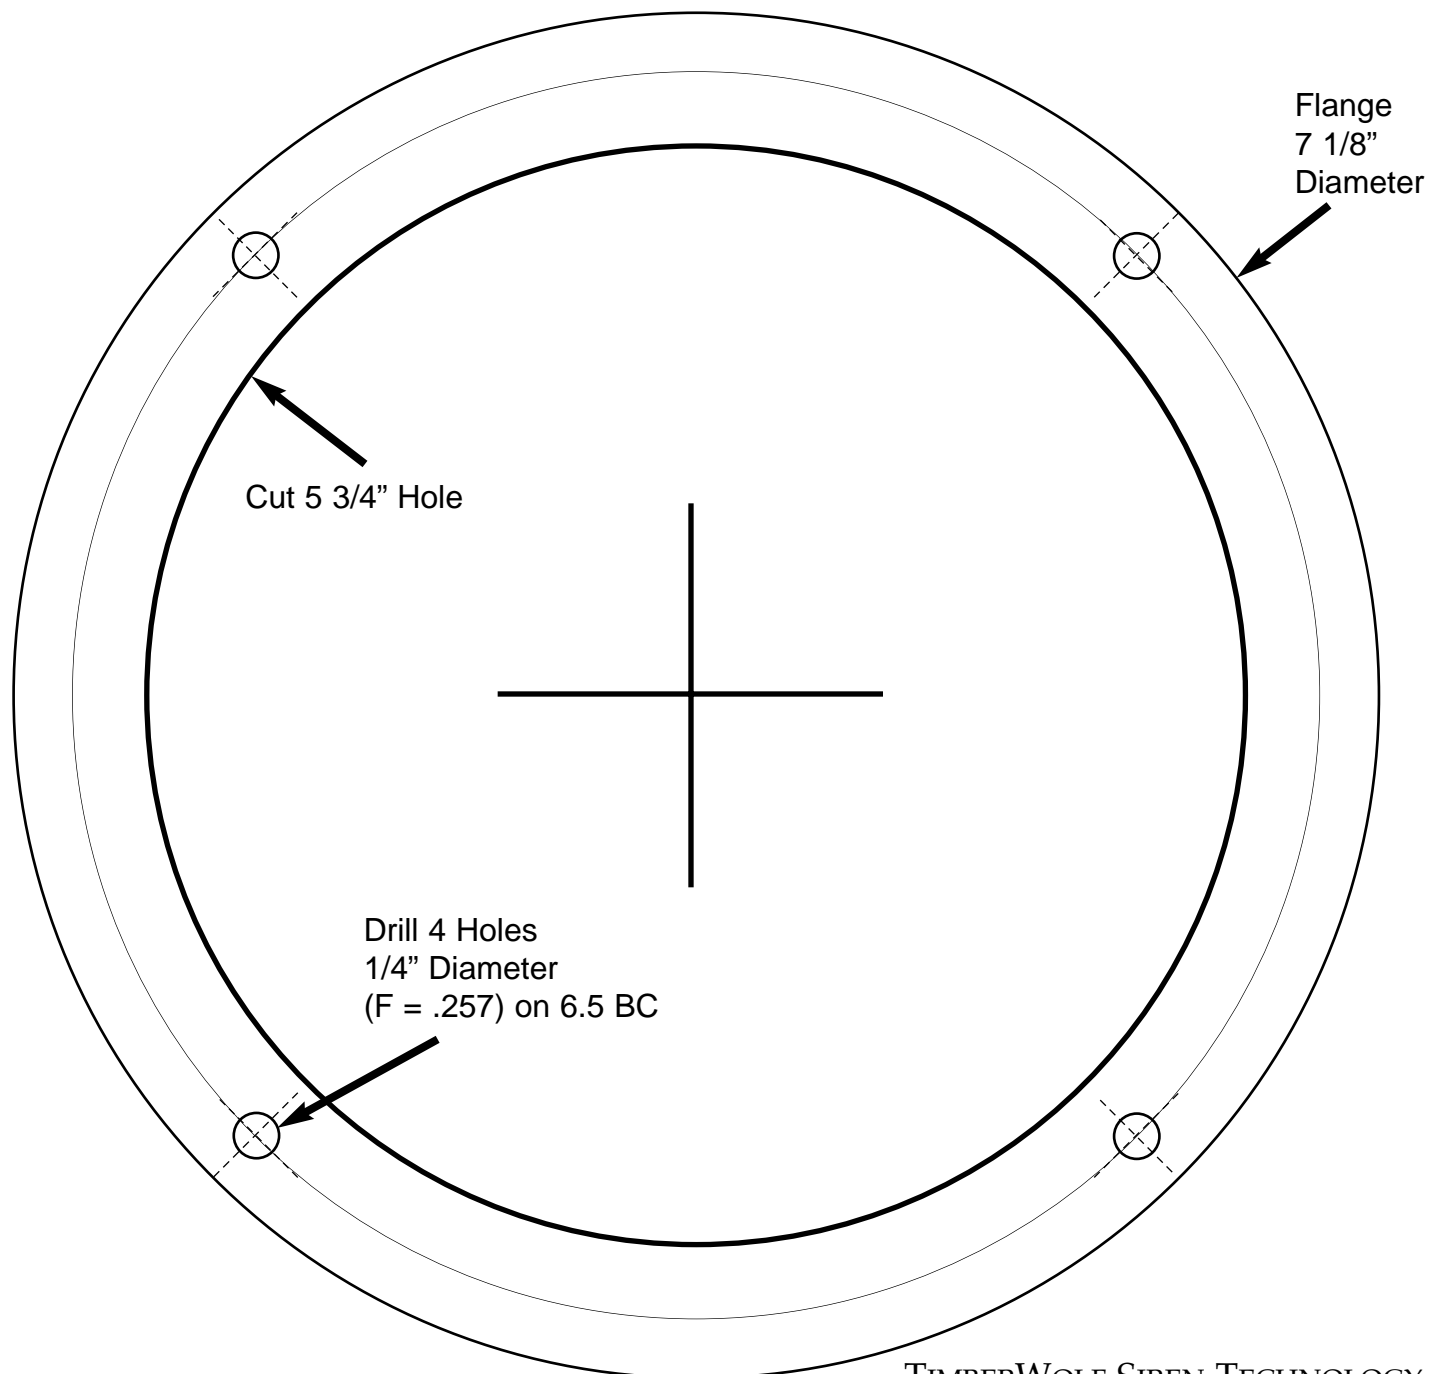

TIMBERWOLF SIREN TECHNOLOGY


3755 EL CAMINO DRIVE
SAN BERNARDINO, CA 92404
(909) 881-5241
FAX (909) 881-2988



WIRING DIAGRAMS



From Warning Light
Master Feed

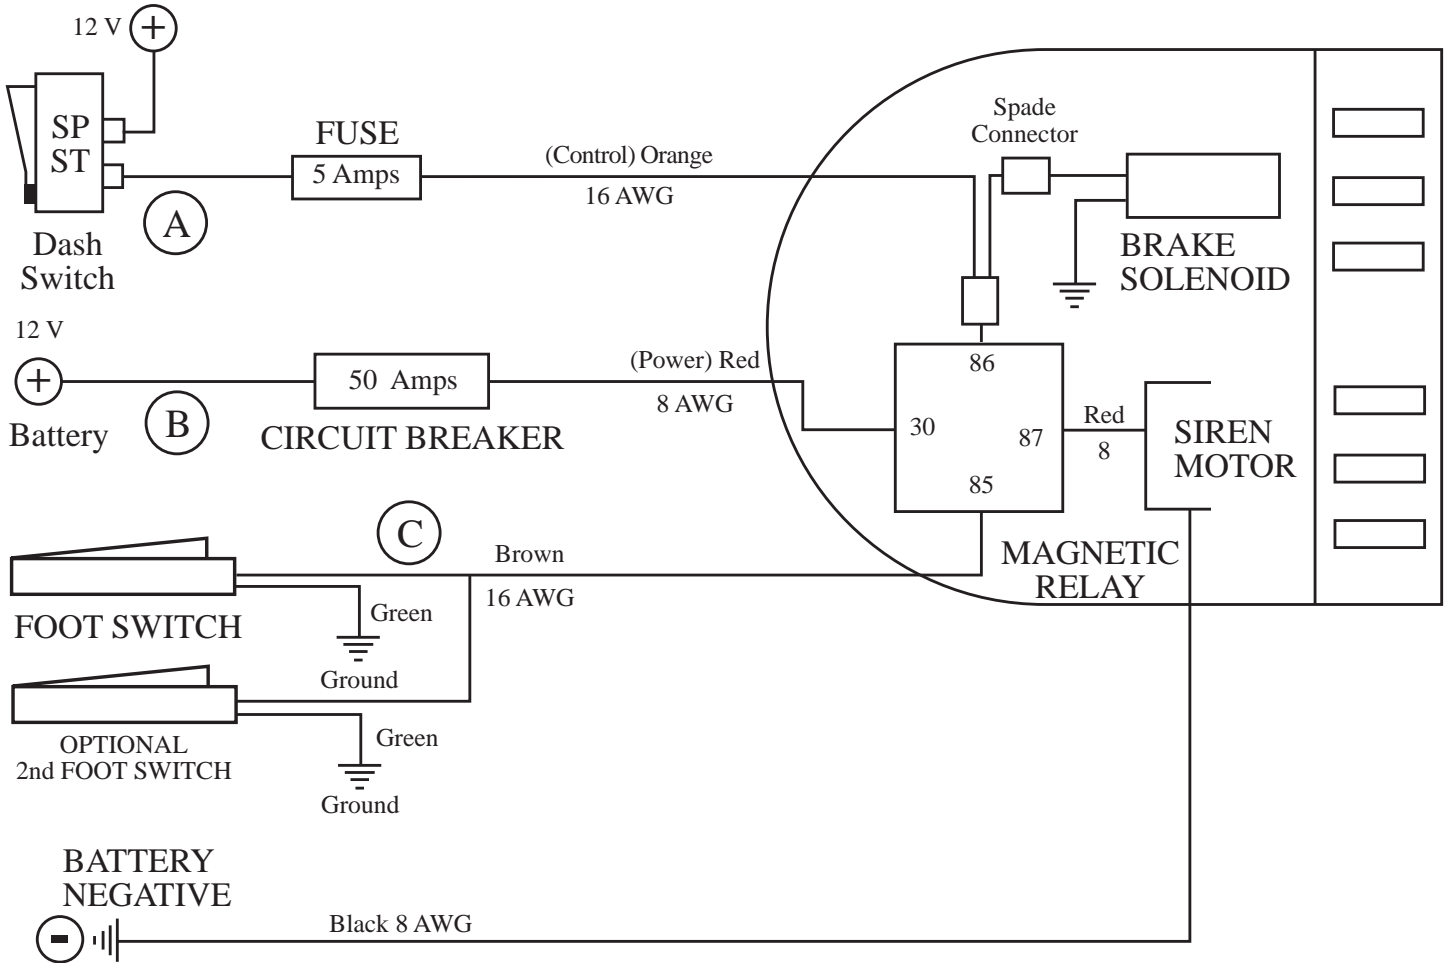


Note: The siren is not internally grounded through the pedestal

TIMBERWOLF SIREN TECHNOLOGY

3755 EL CAMINO DRIVE
SAN BERNARDINO, CA 92404
(909) 881-5241
FAX (909) 881-2988

**OPTIONAL AUTO CYCLE TIMER
TIMBER WOLF SIREN WIRING DIAGRAM (FIG 3)**

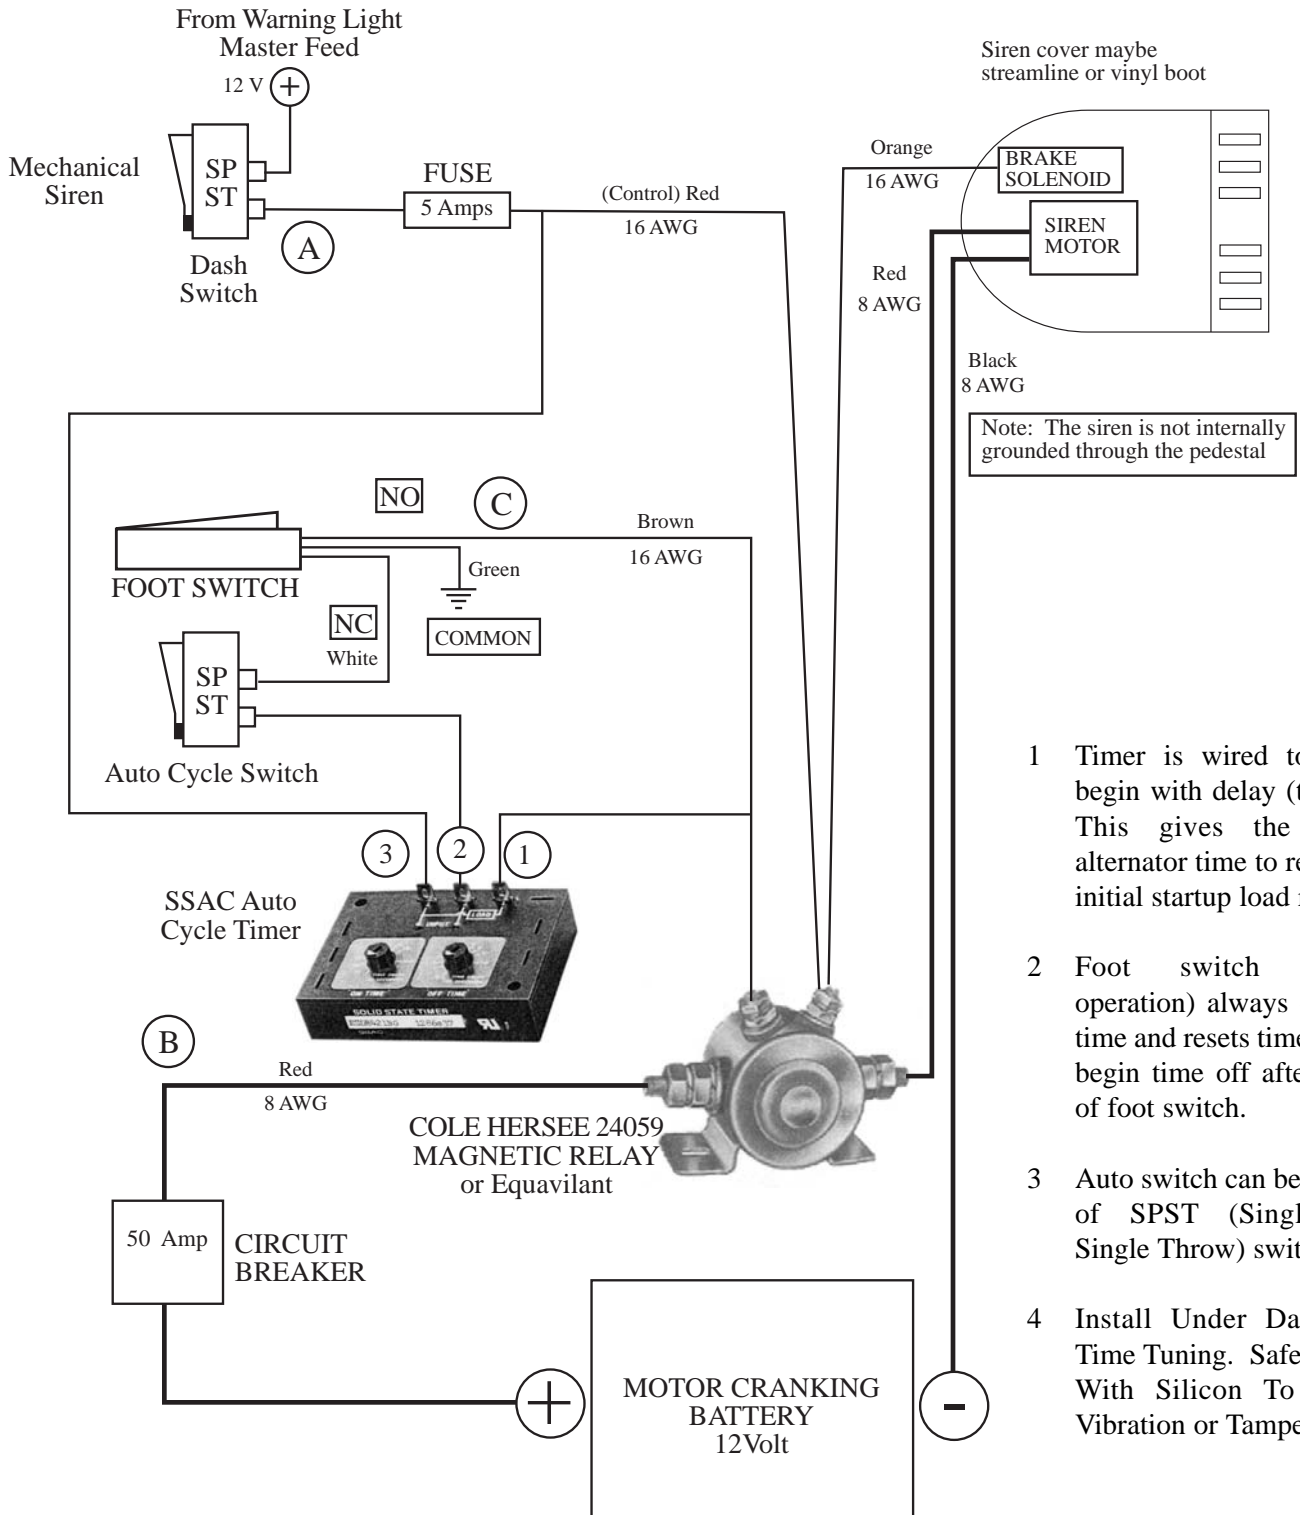

- 1 Timer is wired to always begin with delay (time off). This gives the vehicle alternator time to respond to initial startup load request.
- 2 Foot switch (manual operation) always overrides time and resets timer. It will begin time off after release of foot switch.
- 3 Auto switch can be any type of SPST (Single Pole, Single Throw) switch.
- 4 Install Under Dash After Time Tuning. Safety Knobs With Silicon To Prevent Vibration or Tampering.